




Global Water
 Sensors Samplers Systems
 11267 Coltona Rd. Costa Mesa, Ca USA
 (916) 638-3429 FAX (916) 638-3270

B C D


3 Wire Current Diagram

The output of the sensor is current and has to be read with the multimeter in current mode.

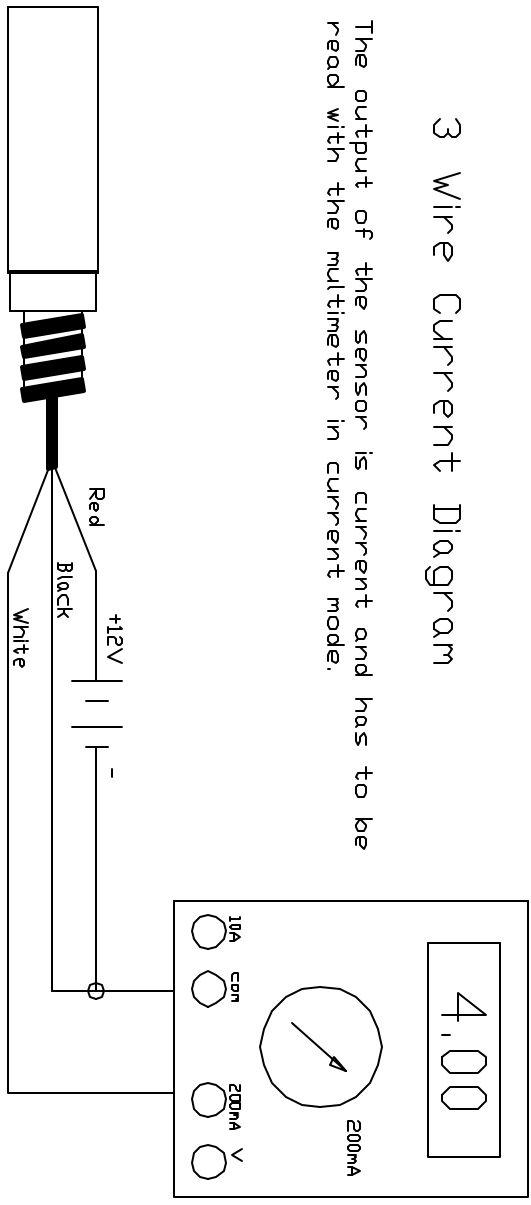

3 Wire Voltage Diagram

In order to measure with meter in volts mode, you need to provide a voltage drop resistor. A resistance of 125 ohms will provide .5 to 2.5 volts from the sensors 4-20 mA output.

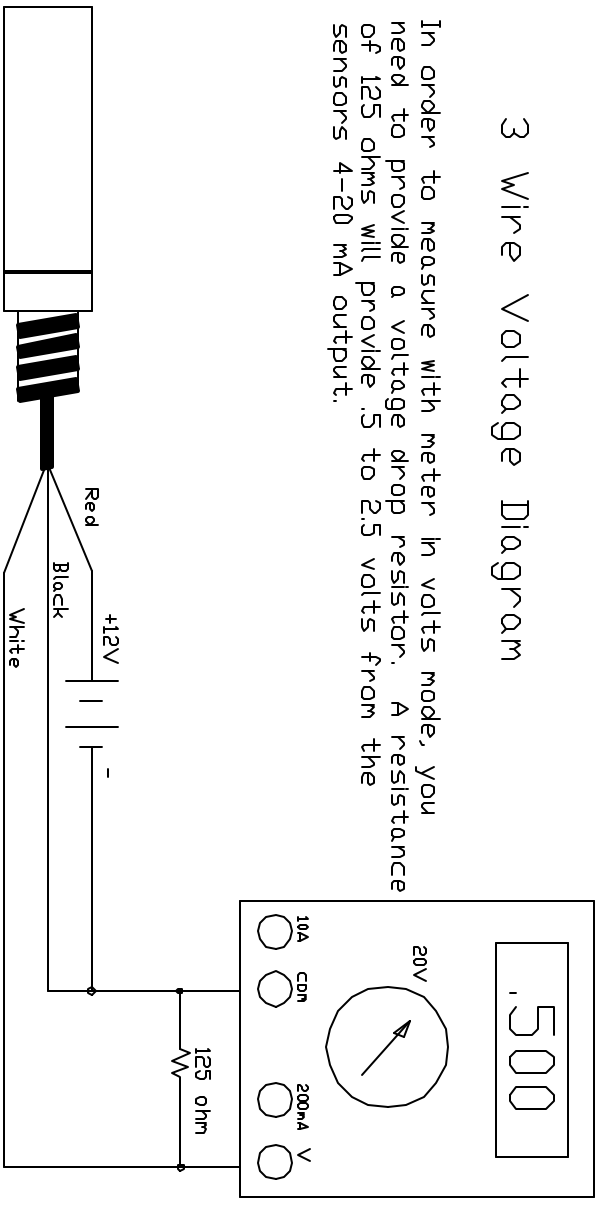

A B C

Title			
3 wire sensor measurement diagram			
Size	Number	Rev	
A	Z00006	A	
Date	3/27/02	Drawn by	XTH
File:	Z00006.dwg	Sheet	1 of 1

D