

## DRP Handled Dippers

Lightweight Long Handheld Sampler



### Features

- Strong but lightweight
- Inert high density polyethylene

### Description


The DRP-Series includes high density polyethylene dippers that are perfect for removing samples from streams, basins, and large tanks. Lightweight but durable, the dippers feature two pour spouts, graduations (in ounces and milliliters), and a PVC grip handle. Choose from 16 oz. (500 ml) or 32 oz. (1,000 ml) cup sizes with handle lengths of 3, 6, or 12 feet (the 12 foot handle includes two pieces). Please note that dippers are not autoclavable.

### Ordering & Options

Order No.	Sample Size	Handle Length
CXBA00	16 oz. (500ml)	3 ft
CXBA10	16 oz. (500 ml)	6 ft
CXBA20	16 oz. (500 ml)	12 ft
CXBB00	32 oz. (1000 ml)	3 ft
CXBB10	32 oz. (1000 ml)	6 ft
CXBB20	32 oz. (1000 ml)	12 ft

## SWNG Swing Sampler

Handheld Sampler for Horizontal Flows

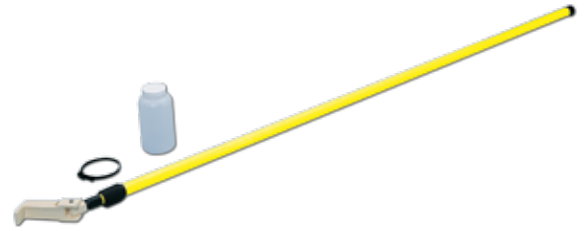

### Features

- Hinged end for easy sample collection
- Pole extends up to 12 feet

### Description

The SWNG Swing Sampler is specifically designed for applications involving the collection of a sample from a horizontal flowing stream of water, such as a sewer, river, or other channel. The end of the sampler swings, allowing collection from different angles up to 90°. The SWNG includes a 6 ft (1.83 m) fiberglass pole that extends up to 12 ft, providing an adequate reach for most sampling situations. A 960 ml polyethylene bottle included with the sampler has a cover with a vinyl liner for leak-proof protection. The bottle is attached to a polyurethane holder and is held in place with a plastic snapper ring that has an adjustable locking device. Other types of bottles may be used, but a different type of fastener may be required to hold the bottle in place. Accessories include 12 packs of either 500 ml or 950 ml HDPE bottles, and additional snapper attaching rings.

### Ordering & Options

#### Swing Sampler

Order No.	Description	Weight
CXA000	Sampler with Pole & Bottle	5.13 lb (2.30 kg)

#### Accessories

Order No.	Description	Weight
CXAA00	500 ml Bottles (12 pk)	1.06 lb (0.50 kg)
CXAA10	960 ml Bottles (12 pk)	1.6 lb (0.70 kg)
CXAB00	Small Snapper Ring (holds 500 ml bottle)	0.06 lb (0.03 kg)
CXAB10	Large Snapper Ring (holds 960 ml bottle)	0.13 lb (0.01 kg)



In the U.S. call toll free  
at 1-800-876-1172  
International: 1-979-690-5560  
Fax: 1-979-690-0440  
Email: [globalw@globalw.com](mailto:globalw@globalw.com)

Visit our online catalog at:  
[www.globalw.com](http://www.globalw.com)  
Our Address:  
11390 Amalgam Way  
Gold River, CA 95670